

Honda HRV/XRV/bean mentally charged V4.6 absorption installation instructions



1. In the original ball head and a car under gasket installation our poles, note: need someone hold the door



2. In the original car ball head with a gasket installation our poles (poles with line up)




3. In the original ball head and a car under gasket installation our poles




4. In the original car ball head with a gasket installation our poles (poles with line up)



5. The yellow arrow tail door plaque to be removed

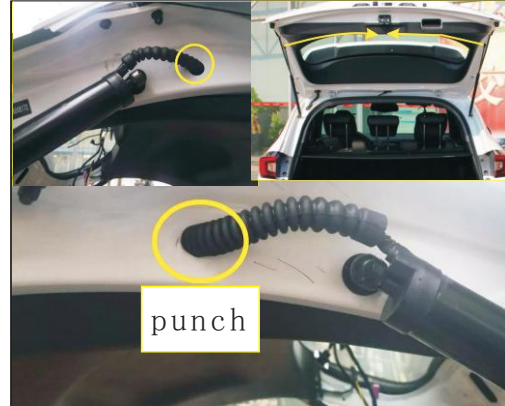

6. Party punch the ball head, poles line cross hole location line to end door control box

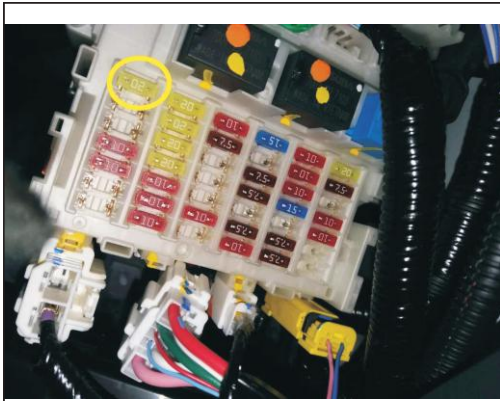

7. Found in place remove the plaque on the right side of the main driving power, the original car 20 a, remove the fuse




8. With our power plug



9. Found in power in front of the ground, the ground connection




10. Installation before we switch (small lamp line by central control desk lamp line)

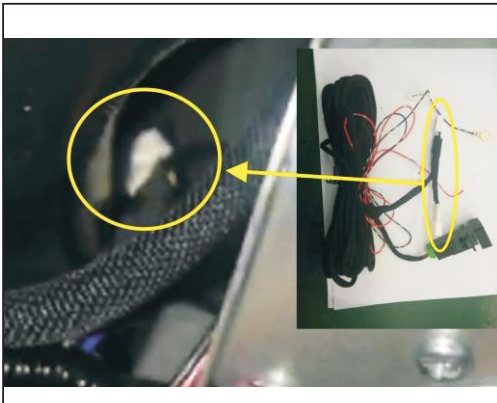

11. In the tail gate before it is to put our original handlebar switch wiring



12. Main driving sliding door on the right will the tube stopper is pulled up, find the Central Line

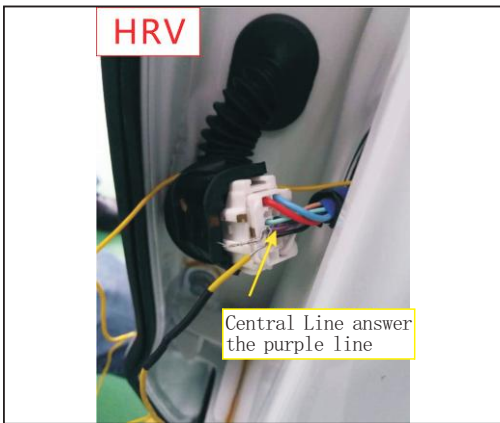


13. Will our yellow Central Line by the seat of the purple line (from left to right in the first row fourth hole)




14. Bean wisdom/XRV Central Line connection, count from left to right in the first row fourth hole (pictured)



15. The power cord, door control line go line to end cover central control box

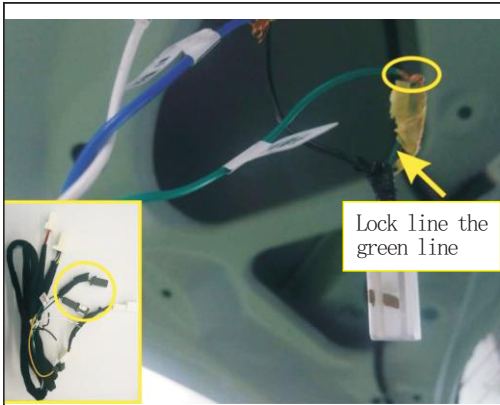


16. Find the seat in the tail door, to put our tee

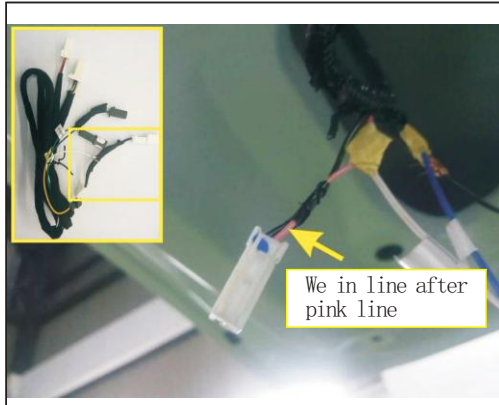


17. Stern door switching tee to the seat



18. Remove the plaque, find the lock

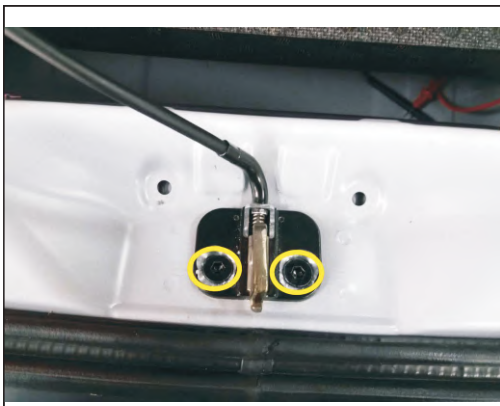

19. Remove the original lock buckle, install our electric lock, with our screws

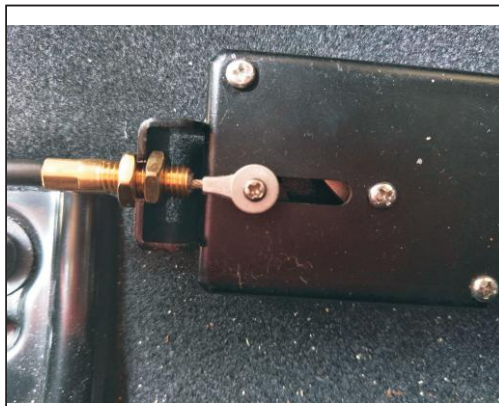


20. Will lock rope clip on the motor, tighten the screws on both sides, with our screw and gasket




21. Will our electric suction line saddle and motor to plug from the socket




22. Electric door suction line go line to end cover central control box

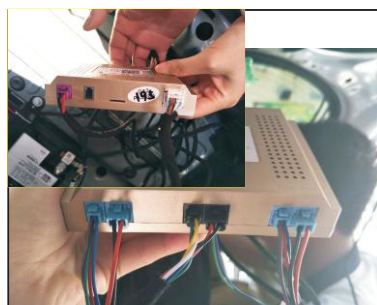

23. Hall line, control line, the power cord according to color a pair we control box

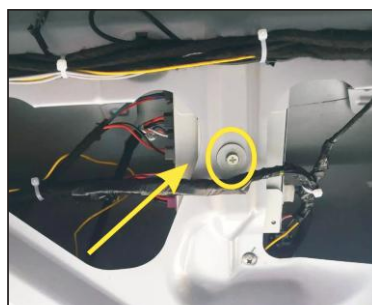

24. Installed central control boxes, with our screws and washers

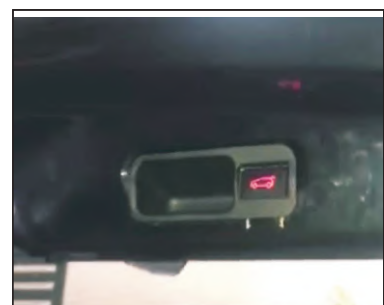

25. Install the tail door keys